



SB01M

Quick Start Guide



Welcome!

Thank you for purchasing this device.

This guide is designed to be a quick reference for installing the system.

Please read this guide carefully before installing and operating the unit.

For more detailed information, please refer to the user manual.

If technical assistance is needed, please contact Speco Technologies Technical Support.

Phone: 1-800-645-5516 option 3

Email: techsupport@specotech.com


Important Safeguards and Warnings

- Speco Technologies assumes no liability or responsibility for any fires or electrical shock caused by improper handling or installation.
- Speco Technologies is not liable for any problems caused by unauthorized modifications or attempted repair.


Note: All of the installation and operations here should conform to your local electric safety rules.

1 Front & Rear Panel Interfaces

The picture and descriptions below are for reference only.

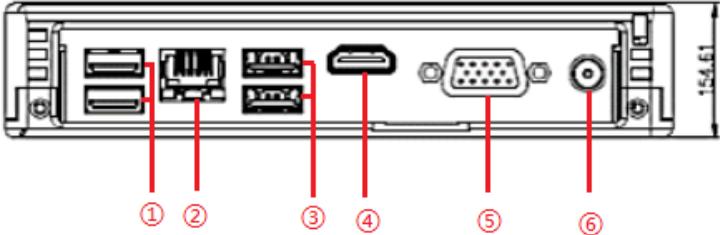

Rear Panel

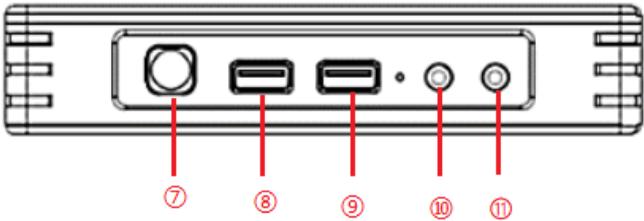

Front Panel


Number	Description	Number	Description
1	USB3.0 *2	7	Power button (LED)
2	Ethernet port (LAN)	8	USB3.0 *1
3	USB2.0 *2	9	USB3.0 *1
4	HDMI output	10	Audio Input
5	VGA output	11	Audio Output
6	DC power supply		

2 Login & Network Configuration

● Login

Before starting, please make sure network cable, monitor and power are connected. After the server is started, the following window will appear as shown below.

Server mode or client mode can be selected when logging in. If “Client mode” is selected, you need to enter the address and port of the authentication/management server. Then this server will be used as a client. If “Server mode” is selected, this server can be used directly.

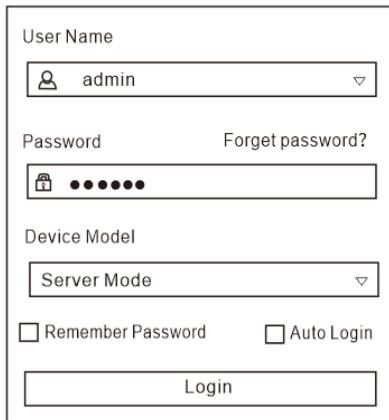

The image shows a login form with the following fields and options:

- User Name:** A dropdown menu with "admin" selected.
- Password:** A text input field with masked characters (dots) and a "Forgot password?" link.
- Device Model:** A dropdown menu with "Server Mode" selected.
- Remember Password:** An unchecked checkbox.
- Auto Login:** An unchecked checkbox.
- Login:** A button at the bottom of the form.

- ① Enter username and password (the default username is admin; the default password is 1234).
- ② Check “Remember Password” or “Auto Login” as needed.
- ③ Click [Login].

If you forget the password, please click “Reset password”. Then a small window will appear. You can reset the password by answering the pre-defined questions.

If this is the first time for you to log in, it is recommended to modify the default password and set the security questions/answers.

● Network Configuration

After logging in, enter Local Configuration → Network Config interface as shown below.

IP Group	<input type="checkbox"/> Enable		
IP Address	<input type="text" value="192.168.52.218"/>		
Subnet Mask	<input type="text" value="255.255.255.0"/>		
Gateway	<input type="text" value="192.168.52.1"/>		
Network Model	<input type="text" value="Adaptive Load Balancing"/>		
Major DNS	<input type="text" value="192.168.0.5"/>		
Minor DNS	<input type="text" value="8.8.8.8"/>		
		eth0(Offline) <input checked="" type="checkbox"/> Bind static IP	
		MAC Address	<input type="text" value="58:53:C0:34:04:64"/>
		IP Address	<input type="text" value="192.168.0.10"/>
		Subnet Mask	<input type="text" value="255.255.255.0"/>
		Gateway	<input type="text" value="192.168.0.1"/>

Set the network parameter according to the actual condition.

Then you can add devices and set other parameters as needed. Please refer to the user manual for more details.