



SB11M

Quick Start Guide



Welcome!

Thank you for purchasing this device.

This guide is designed to be a quick reference for installing the system.

Please read this guide carefully before installing and operating the unit.

For more detailed information, please refer to the user manual.

If technical assistance is needed, please contact Speco Technologies Technical Support.

Phone: 1-800-645-5516 option 3

Email: techsupport@specotech.com

Important Safeguards and Warnings

- Speco Technologies assumes no liability or responsibility for any fires or electrical shock caused by improper handling or installation.
- Speco Technologies is not liable for any problems caused by unauthorized modifications or attempted repair.

Note: All of the installation and operations here should conform to your local electric safety rules.

1 Introduction

1.1 Interfaces and Indicators


The picture below is for reference only.



NO.	Description	NO.	Description
1	Power indicator	3	Reset
2	Power switch	4	System disk running indicator

1.2 Rear Panel Instructions


The picture below is for reference only.

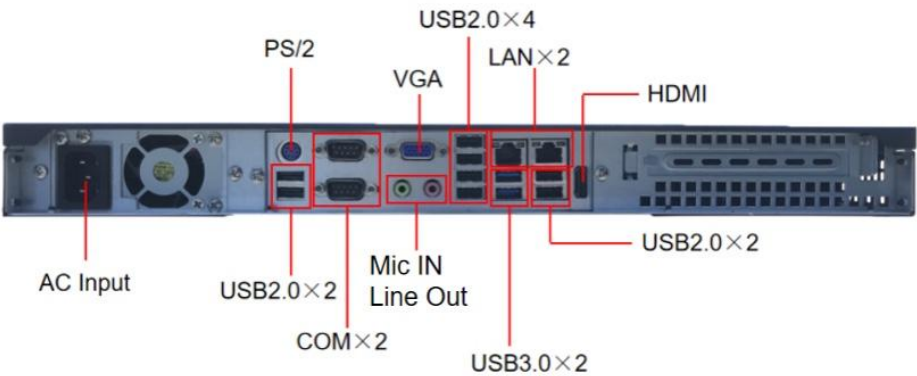

2 Login & Network Configuration

● Login

Before starting, please make sure network cable, monitor and power are connected. After the server is started, the following window will appear as shown below.

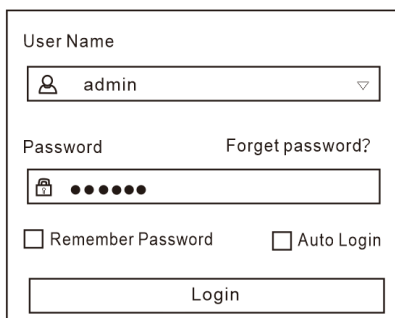A login form with a white background and a thin black border. It contains the following elements: a 'User Name' label above a text input field containing 'admin' with a user icon on the left and a dropdown arrow on the right; a 'Password' label above a password input field with a lock icon on the left and six dots representing the password; a 'Forget password?' link to the right of the password field; two checkboxes labeled 'Remember Password' and 'Auto Login' below the password field; and a 'Login' button at the bottom.

User Name

admin

Password

Forget password?

☐ Remember Password ☐ Auto Login

Login

- ① Enter username and password (the default username is admin; the default password is 1234).
- ② Check “Remember Password” or “Auto Login” as needed.
- ③ Click [Login].

If you forget the password, please click “Reset password”. Then a small window will appear. You can reset the password by answering the pre-defined questions.

If this is the first time for you to log in, it is recommended to modify the default password and set the security questions/answers.

● Network Configuration

After logging in, enter Local Configuration→Network Config interface as shown below.

IP Group <input type="checkbox"/> Enable		
IP Address	<input type="text" value="192.168.52.218"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>	
Gateway	<input type="text" value="192.168.52.1"/>	
Network Model	<input type="text" value="Adaptive Load Balancing"/>	
Major DNS	<input type="text" value="192.168.0.5"/>	
Minor DNS	<input type="text" value="8.8.8.8"/>	

eth0(Offline) <input checked="" type="checkbox"/> Bind static IP	
MAC Address	<input type="text" value="58:53:C0:34:04:64"/>
IP Address	<input type="text" value="192.168.0.10"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.0.1"/>

eth1(Offline) <input checked="" type="checkbox"/> Bind static IP	
MAC Address	<input type="text" value="58:53:C0:34:04:65"/>
IP Address	<input type="text" value="192.168.0.11"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.0.1"/>

Set the network parameter according to the actual condition. It is recommended to enable “IP Group” and the network mode is set to “Adaptive Load Balancing”.

Then you can add devices and set other parameters as needed. Please refer to the user manual for more details.