

2MP Temperature, Face and Mask Detection Reading Panel



Quick Installation Guide

Product Model: **O2TML**




Step 1

Hardware Assembly

Wall Installation



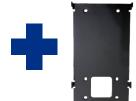





Make All Necessary Connections

Power Requirements: 12VDC 1A



Ethernet (non-PoE):
Required to access settings

Installation should be performed by a qualified professional

Install at least 10ft away from any window or doorway.

Avoid Indirect Sunlight.

Avoid Backlight.

At least 10ft

NIGHT

- Install at least 6.5 ft away from any light source.
- Avoid any light source in the field of view within 30° of the horizontal plane.















Step 3 Attention

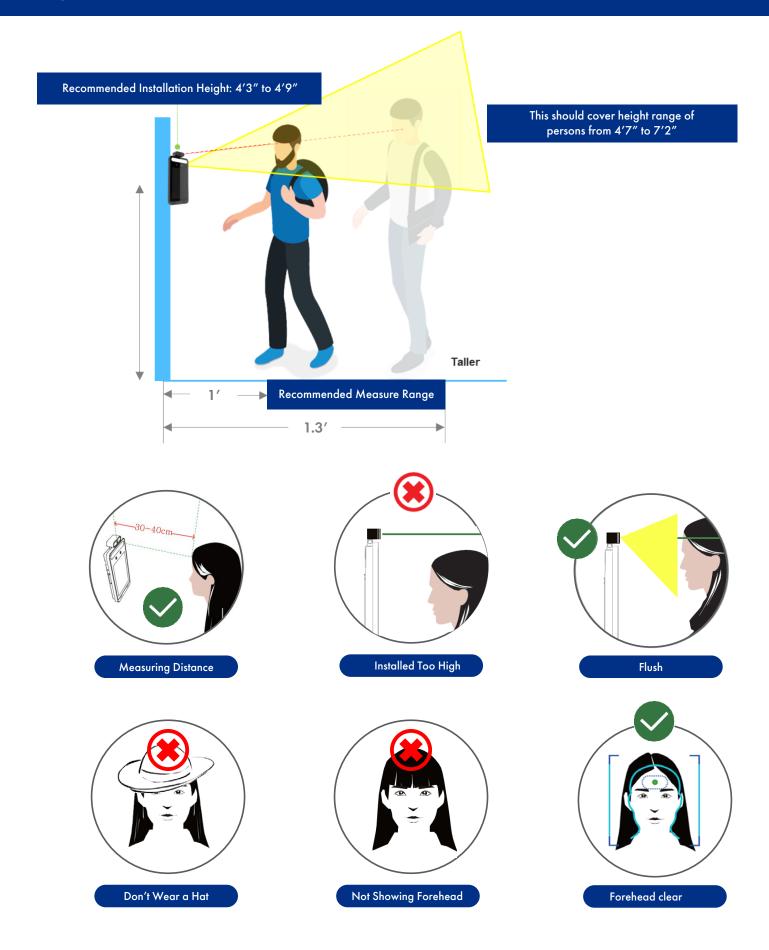


Connect the face recognition terminal to the LAN and power it up

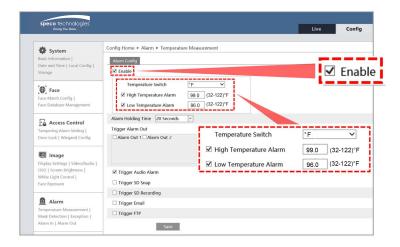

Temperature Measurement

- a Enable Temperature Measurement
- **b** Set Temperature Range
- **Set Alarm Trigger**
- **d** Save

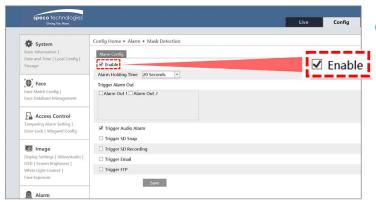



2 Mask Detection


- a Enable Mask Detection
- **b** Set Alarm Holding Time
- **C** Set Alarm Trigger
- **d** Save

3 Setting of Face Function

Face Database Management

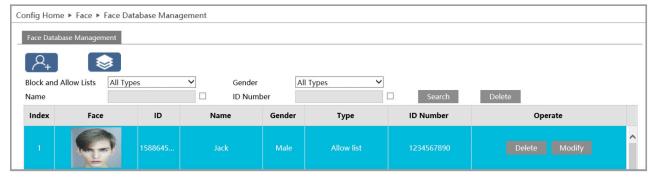

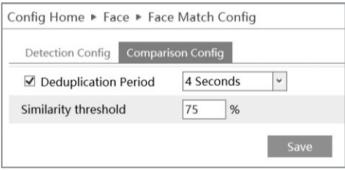

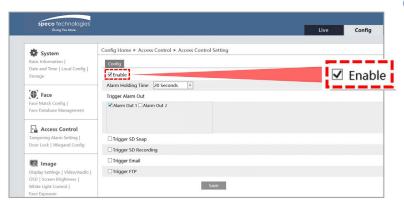

4 Access Control

Alarm Linkage Door Opening Mode


- a Enable Mask Detection
- **b** Set Alarm Holding Time
- **C** Set Alarm Trigger
- **d** Save

Wiegand Mode

Connection Method 1:


• Open the door after successful matching



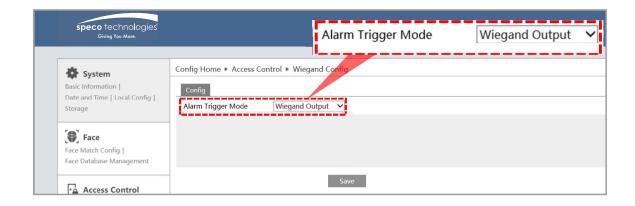


Connection Method 2:


• The card reader reads the card information, weigand inputs it to the terminal, and after successful verification with the face information, alarm output to open the door.

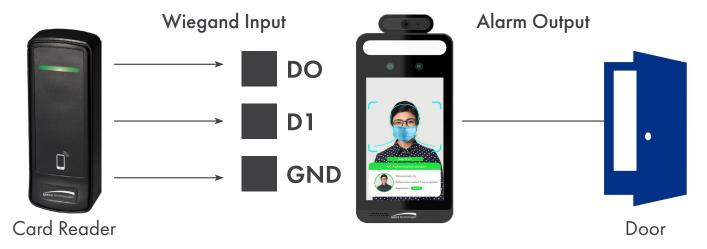



5 Door Lock

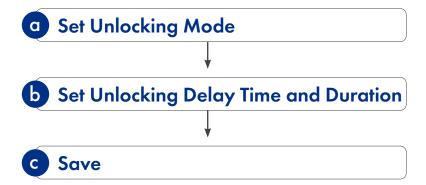

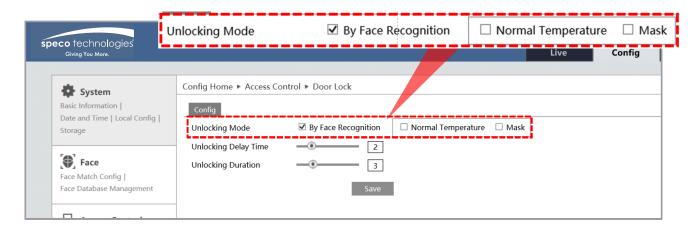

Tip: Select any one or more combination of unlocking modes as needed.

*This device is not intended for use in the diagnosis of any disease or other conditions or in the cure, mitigation, treatment, or prevention of any disease

