



IP Strobe Speaker

Quick Start Guide



1.2 Product/ Wiring Description

| No./ Name | Description |
|--------------|---------------------|
| DC Connector | DC 12-36V, DC12V/4A |
| LAN | LAN POE++ |
| Alarm In | Yes |
| Alarm Out | Yes |
| Reset | Yes |
| Audio Input | Yes, RCA Female |

2. Log in Web Page


Static IP Address: 192.168.0.100

DHCP Enabled as Default


Default User Name: admin

Default PW: 111111

Note: New PW must be entered!

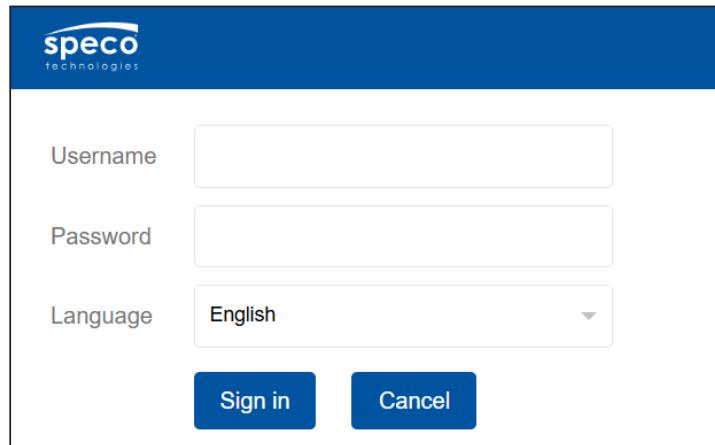

The image shows the Speco Technologies login interface. It features a blue header with the company logo. Below the header is a form with three fields: 'Username' (empty), 'Password' (empty), and a 'Language' dropdown menu set to 'English'. At the bottom are two buttons: 'Sign in' and 'Cancel'.

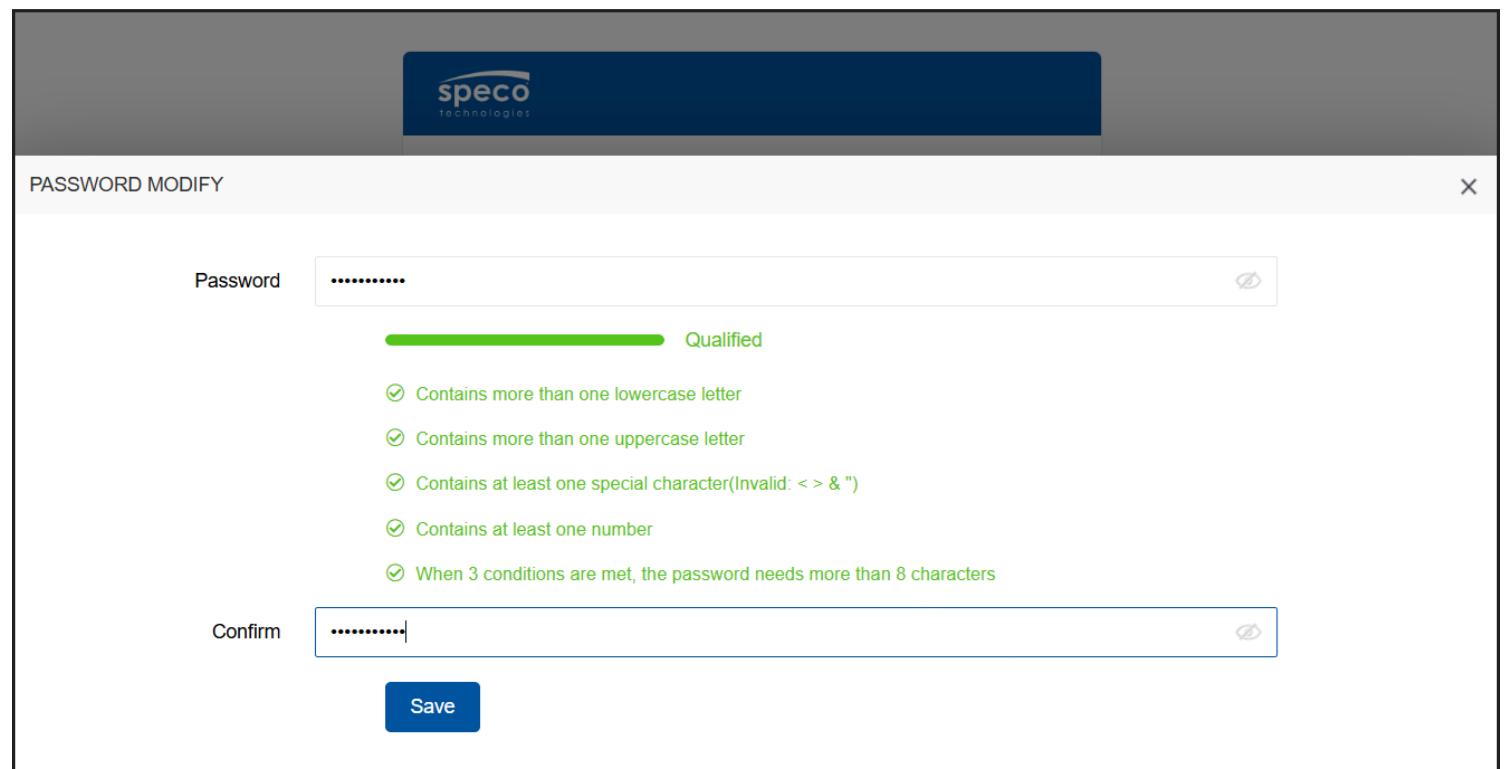

The image shows the 'PASSWORD MODIFY' page. The header includes the Speco Technologies logo and a close button. The main area has a 'Password' field containing '*****' and a 'Confirm' field below it. To the right of the password field is a password strength indicator consisting of a green progress bar and the word 'Qualified'. Below the bar is a list of six green checkmarks indicating password requirements: 'Contains more than one lowercase letter', 'Contains more than one uppercase letter', 'Contains at least one special character (invalid: < > & ")', 'Contains at least one number', and 'When 3 conditions are met, the password needs more than 8 characters'. At the bottom is a 'Save' button.

3. Resource

This page includes “Audio” and “Led” resources.

Audio: IP strobe speaker has default pre-recorded audios, users can also upload the audios they need to play, by clicking “Custom” button.

Audio File Format: WAV Channel Type: Mono Sampling Rate: 8K

Led: IP strobe speaker has “Front” and “Back” lights, both are made of RGB.

Color: Red/Green/Blue/White/Yellow/Violet/Cyan.

Pattern: Front and Back lights will work differently for different application purposes.

Front Light: Steady/1 Sec Blink/ 2 Sec Blink/ 5 Sec Blink/ Breathe and Strobe.


Back Light: Steady/Chase.

Note: Led intensity and strobe frequency can be customized by users freely, they are listed into “Schedule” page.

4. Schedule

4.1 Alarm Config

Users can config 5 alarm schedules based on different time needs.

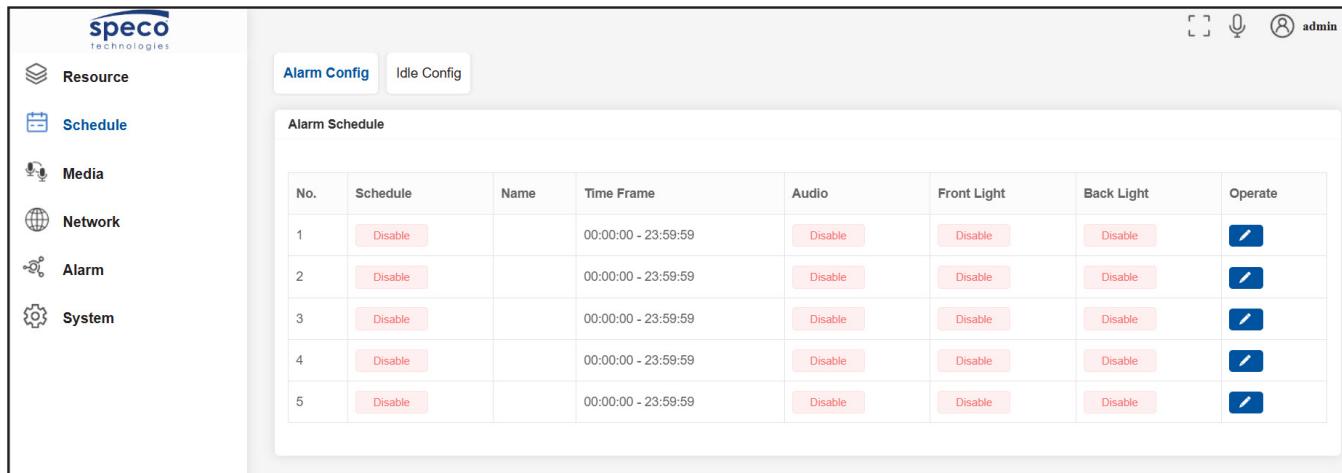

| No. | Schedule | Name | Time Frame | Audio | Front Light | Back Light | Operate |
|-----|----------|------|---------------------|---------|-------------|------------|-------------------------------------|
| 1 | Disable | | 00:00:00 - 23:59:59 | Disable | Disable | Disable | <input checked="" type="checkbox"/> |
| 2 | Disable | | 00:00:00 - 23:59:59 | Disable | Disable | Disable | <input checked="" type="checkbox"/> |
| 3 | Disable | | 00:00:00 - 23:59:59 | Disable | Disable | Disable | <input checked="" type="checkbox"/> |
| 4 | Disable | | 00:00:00 - 23:59:59 | Disable | Disable | Disable | <input checked="" type="checkbox"/> |
| 5 | Disable | | 00:00:00 - 23:59:59 | Disable | Disable | Disable | <input checked="" type="checkbox"/> |

Alarm Out: When IP strobe speaker is triggered, you can choose whether to send this alarm signal to the devices by GPIO Alarm out on the cable.

Duration: How long the alarm will last.

Audio Volume: Here you can config when alarm is triggered, the audio voice volume.

Front Light Color 1 and 2: When alarm is triggered, front light can work with 1 color or 2 colors together. For example, when alarm is triggered, if you want red and blue color strobe, then you can

choose color 1 as RED, and color 2 as BLUE, and “Front Light Mode” choose “Strobe”.

Network Notification: When alarm is triggered, you can also decide whether to send the alarm event to 3rd party by HTTP, or send notification to other IP strobe speakers in the same local network, it is called “BroadCast”.

Email: When alarm is triggered, you can decide whether to send email for notification.

Test: “Test” button is used to approve your settings are correct or not.

4.2 Idle Config

Idle schedule is used for when there is no alarm happening, how you will want the device to work. The IP strobe speaker can be used for audio broadcasting or flash lights as reminding/attract visitors.

Idle totally has 5 schedules based on your different time needs.

5. Talk(Two Way Communication)

PC Mic: If you need to talk via VMS/NVR, you need to ENABLE it. It is default as “Enabled”.

Line In: Talk down directly via your analog device.

Device Mic: it means IP strobe speaker’s Mic. If you need to listen, you need to enable it first.

Codec: G711U,G711A, AAC

Volume: Talk down’s voice volume adjustment.

Note: If you need to talk through web directly, please click the talk button on the top right, as picture showed above.

6. Network

This page includes: TCP/IP, Email,HTTP/HTTPS,RTSP and WIFI.

TCP/IP: DHCP is enabled as default.

Email: When alarm happens, you can send email to notify. After your setting is done, you can click “Test” to approve your settings are correct or not.