



Paging Microphone | Quick Start Guide

Step 1: Interface Specifications

1. Volume Switch for microphone, range 1-100
2. Volume Switch for background music, range 1-100
3. Volume Switch for speaker, range 1-100
4. Power button for screen display
5. Built-in Microphone



1. 2 audio input and 1 audio output
2. Volume switch for audio output
3. 2 GPIO in and 1 GPIO out(optional choice)
4. RJ45 network port
5. Reset system and firmware button
6. USB 2.0 interface
7. Interface for system upgrading
8. Power interface 12V/2A

Step 2: Application and Setting

2.1 SIP Setting.

< Back
Save

SIP Line

Name

Server

Port

Username

Account


Password

Expire time

Status ☒ Available ☐ Do not Disturb ☐ Offline

2.2 How to Make SIP Call.

1. Click the Green Phone or pick a sip line
2. Extension number can be called by. 6026.
3. Make a phone call by P2P eg.
1@192.168.5.200.2 GPIO in and 1 GPIO out(optional choice)

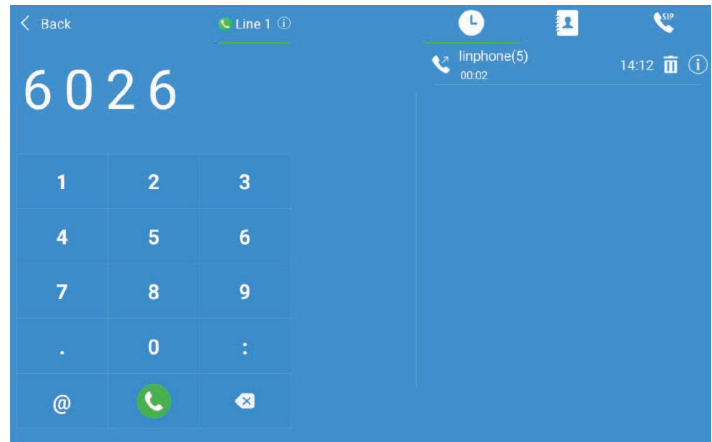


2.3 RTP Multicast

1. Add a RTP address
2. Select audio codec and duration time,
3. Choose paging source (mic/ media/ AUX in),
4. Select a paging mode.




2.4 History & Contact

1. Click the green Clock on the main menu. Calling history & add contact information can be found here.

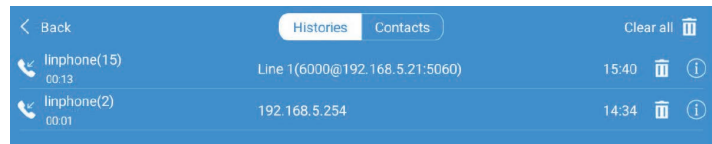

2.5 New Contact

1. Add a new contact.
2. Setting the name, organization, numb and speed dial key.

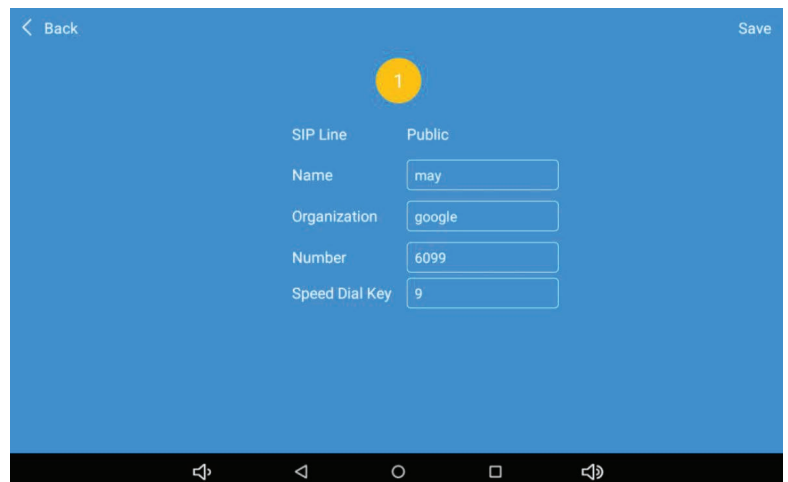


2.6 System Settings

Can set sip audio codec and microphone as follows.

1. Upload music or any MP3 files to FTP sever:
ftp://192.168.5.252:8054(it's a dynamic IP).

2. Use USB to download music.

3. Upload files by FTP tool, like File Zilla.

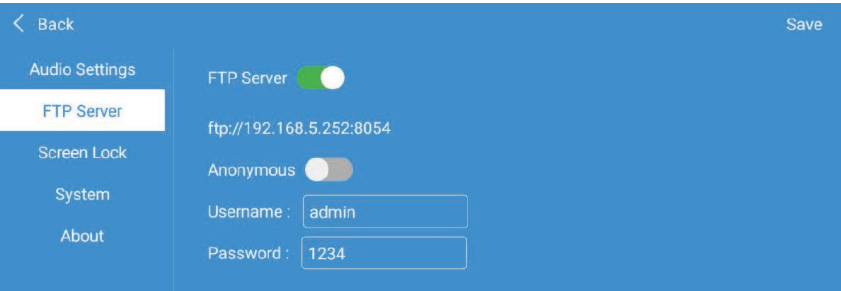

2.7 Screen Lock Settings

Can set sip audio codec and microphone as follows.

