



Speco Blue VMS (Lite Version)

Quick Start Guide

Hardware Requirements

No.	Speco Blue VMS Components	Hardware Configuration Recommendation	Software Configuration Recommendation
1	PC	Intel® Core™ i5 7500 3.0GHz or above / 16GB memory / 1TB SATA / Gigabit NIC or AMD HD6570 512MB GDDR5 or above / 500GB SATA / Gigabit NIC	Windows 10 Professional/Ultimate

Firewall Requirements

Server	Port Type	Port
Authentication Server	Internal Port	6003
Configuration Server	Internal Port	7002
Media Transfer Server	Internal Port	6006
Storage Server (Windows/IP-SAN)	Internal Port	6009
Alarm Server	Internal Port	6033
Intelligent Server	Internal Port	6069

Installation Guide


Step 1: Download Speco Blue VMS Lite

Visit the Speco Technologies® website and download Speco Blue VMS Lite for either Windows or Mac.

Download Links:

[Speco Blue VMS for Windows](#)

[Speco Blue VMS for Mac](#)

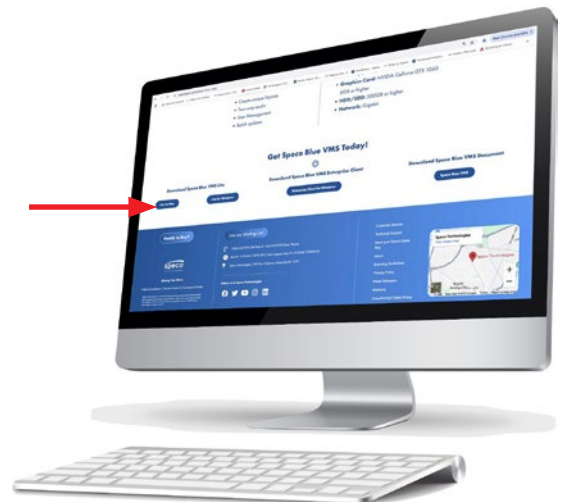


Installation Guide (Continued)

Step 2: Install Speco Blue VMS Lite

1. Open the email with the Speco Blue VMS Lite download link.
2. Click the download link and install the software on your PC or Mac.

Step 3: Initial Login


1. Use the default credentials for the first login:
 - **Username:** admin
 - **Password:** 1234
2. You will be prompted to change the default password after logging in.
3. Once logged in, the system will navigate to the home screen.

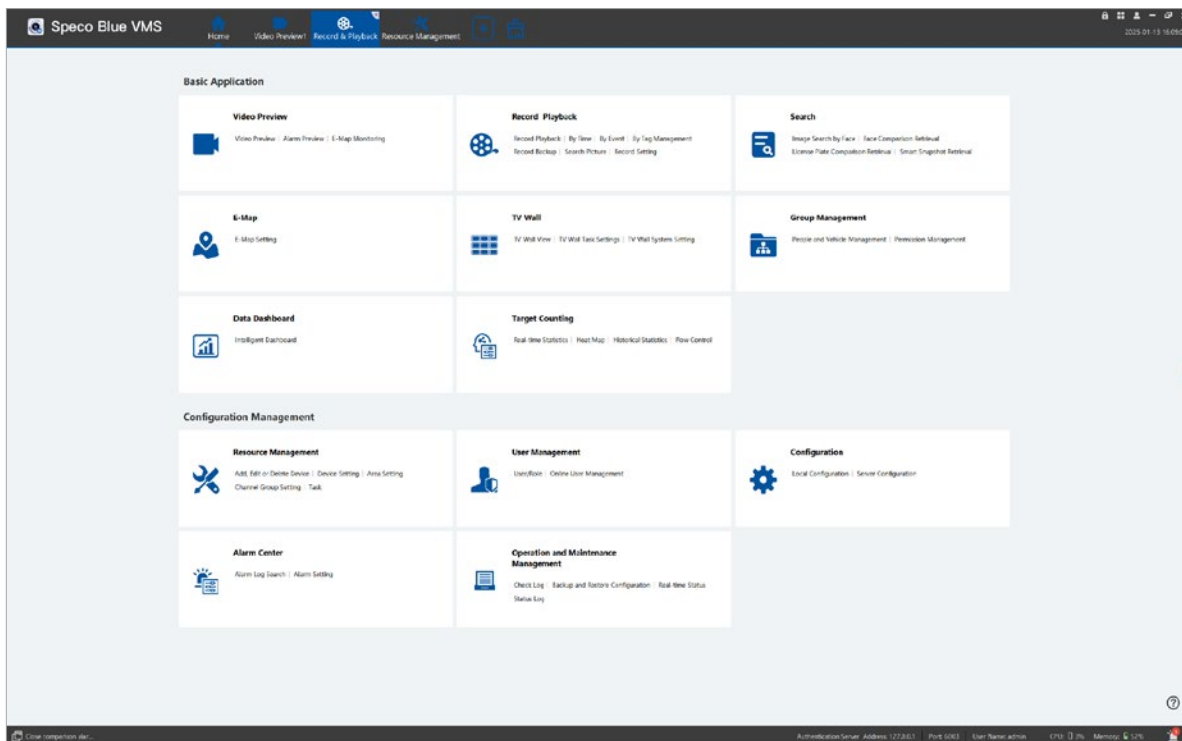


Adding a Site to Speco Blue VMS Lite

Step 1: Add Devices

1. Click on the **Resource Management** tab.

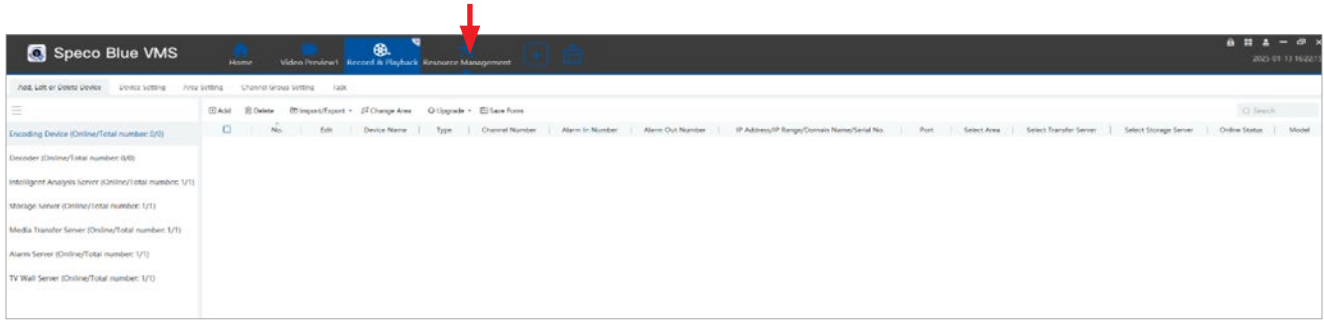


2. Go to **Encoding Device** and click the **Add (+)** button.

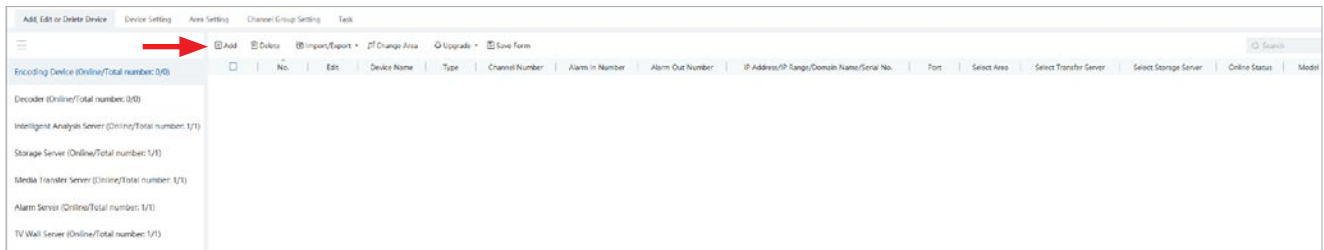

3. Use one of the following methods:

Quick Add:


Automatically detects Speco Blue devices on the local network. Select the desired device(s) and click **OK**.

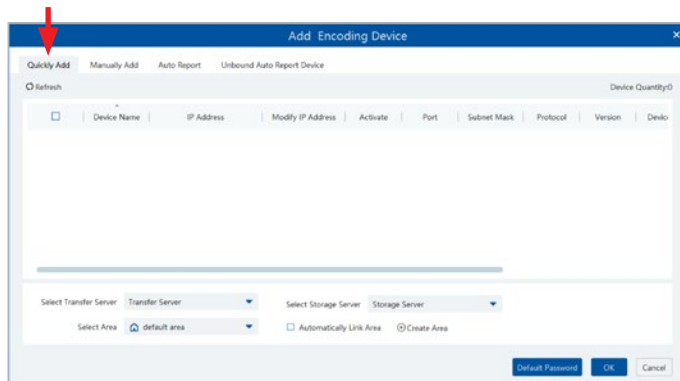

OR

Manual Add:


Click the Manual Add tab, select Serial No., and use the NAT QR code for remote viewing and click **OK**.

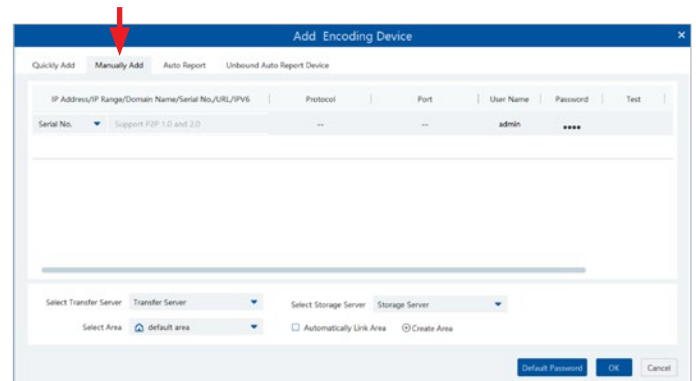

Adding a Site to Speco Blue VMS Lite (Continued)

Step 2: Create an Area

1. Navigate to **Area Settings** and click **Add**.

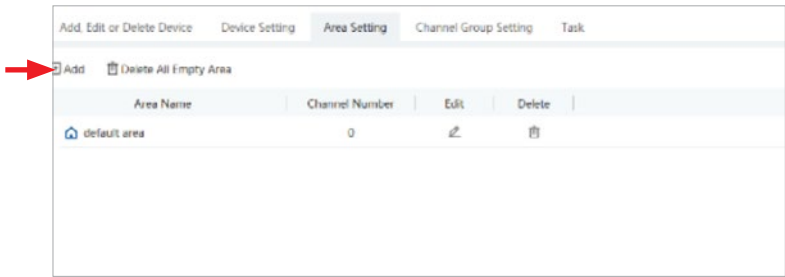

2. Name the area and select a parent area for organization purposes.

Create Area

Parent Area

* Area Name


OK

Cancel

Live View and Playback


Step 1: Live View Setup

1. Click on the **Video Preview** tab.

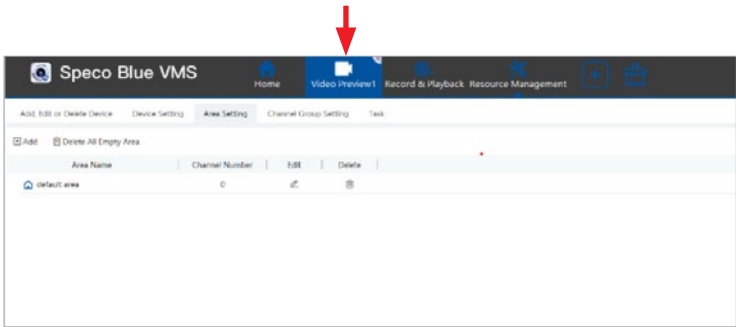

Live View and Playback (Continued)

2. Drag and drop the cameras you want to display onto the preview screen.
3. To save the layout:
 - Click **View**.
 - Select the configured video preview layout.
 - Click **Save**.

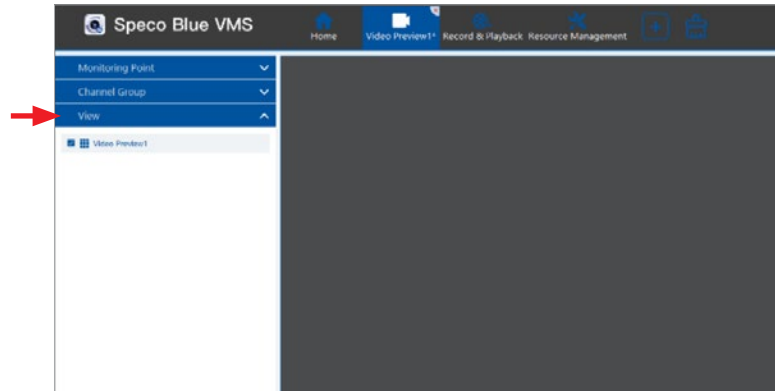

Step 2: Playback Setup

1. Click on the **Record/Playback** tab.
2. Select the desired cameras for playback.
3. Choose the playback source (**NVR**) and set the **date** and **time**.
4. Click the **Play** button to view the recorded footage.

