


Install Guides

SXK400



ASSEMBLY

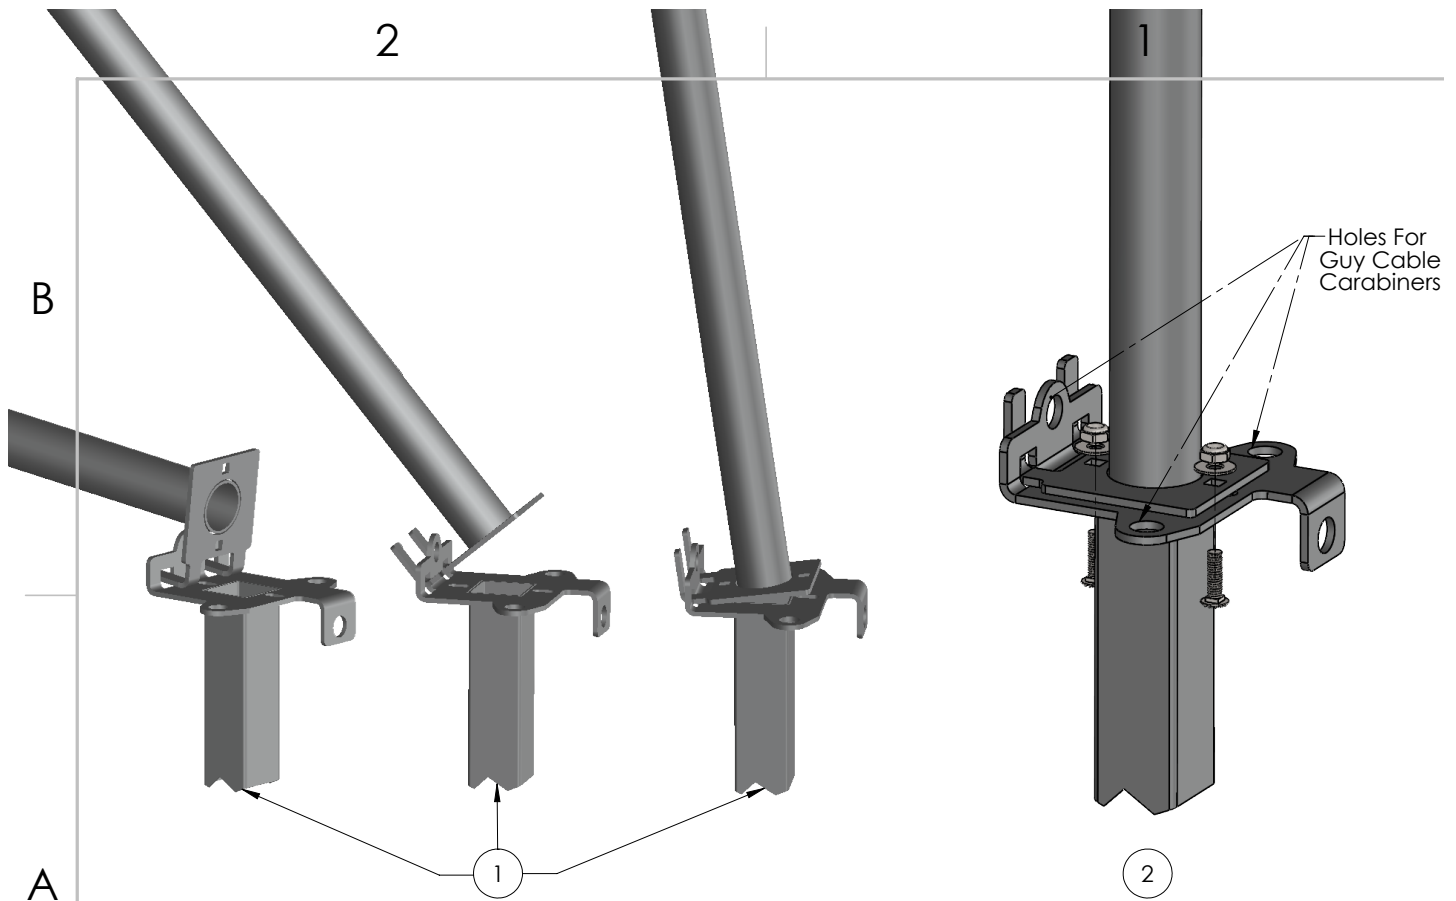

STEP 1

1. Set hooks into guide slots
2. Rotate extension piece upward

STEP 2

1. Bolt extension to mast using (2x) 5/16 Carriage Bolts

**CONNECT
WITH
US TODAY**

☎ 1.800.645.5516

🌐 SPECOTECH.COM

